

3300309 O-Augustine Media Cabinet

Parts List

A.	Top Panel	1 pc
B.	Side Panels	2 pcs
C.	Back Panel	1 pc
D.	Left Door	1 pc
E.	Right Door	1 pc
F.	Adjustable Shelf	1 pc
G.	Bottom Assembly	1 pc
H.	Legs	4 pcs
I.	Brass Stretcher	1 pc
J.	Shelf Pins	4 pcs
K.	Connecting Bolts	4 pcs
L.	Eccentric Cams	4 pcs
M.	Plastic Covers	4 pcs
N.	Allen Head Bolts	8 pcs
O.	Lock Washers	8 pcs
P.	Flat Washers	8 pcs
Q.	Pan Phillips Head Screws	20 pcs
R.	Flat Phillips Head Screws	12 pcs
S.	Phillips Head Screwdriver	1 pc
T.	Flat Head Screwdriver	1 pc
U.	Allen Head Wrench	1 pc
V.	Optional Allen Head Screwdriver Bit	1 pc


- * Please make sure that you have all the parts and hardware indicated above before you begin assembly of this item.
- * Use the hardware illustrations to determine correct piece and size.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.
- * Take care not to overtighten bolts if using supplied Allen Head Screwdriver Bit.

Page 1 of 6 R1-03-26-05



3300309

O-Augustine Media Cabinet Hardware Illustrations







J. Shelf Pin



K. Connecting Bolt




L. Eccentric Cam



M. Plastic Cover



N. Allen Head Bolt



O. Lock Washer



P. Flat Washer



Q. Pan Phillips Head Screw

R. Flat Phillips Head Screw

Page 2 of 6 R1-03-26-05



3300309


O-Augustine Media Cabinet

Attach Legs & Stretcher

Parts required

G.	Bottom Assembly	1 pc	P.	Flat Washers	8 pcs
H.	Legs	4 pcs	Q.	Pan Phillips Head Screws	4 pcs
I.	Brass Stretcher	1 pc	S.	Phillips Head Screwdriver	1 pc
N.	Allen Head Bolts	8 pcs	U.	Allen Head Wrench	1 pc
O.	Lock Washers	8 pcs	V.	Optional Allen Head Screwdriver Bit	1 pc

- 1. <u>Attach Legs (I)</u> Put Bottom Assembly (G) upside down on a soft surface. Align the pre-threaded holes in the Legs (H) with the pre-drilled holes in the corner blocks of Bottom Assembly (G). Secure, but do not tighten, with Allen Head Bolts (N), Lock Washers (O) and Flat Washers (P) using Allen Head Tool (U or V). See illustration #1.
- 2. <u>Attach Brass Stretcher (I)</u> Align the pre-drilled holes in the ends of Stretcher (I) with the pre-drilled holes in the Legs (H). Secure with Pan Phillips Head Screws (Q) using Phillips Head Screwdriver (S). Secure all Legs (H) by tightening Allen Head Bolts (N) at this time. See illustration #1.

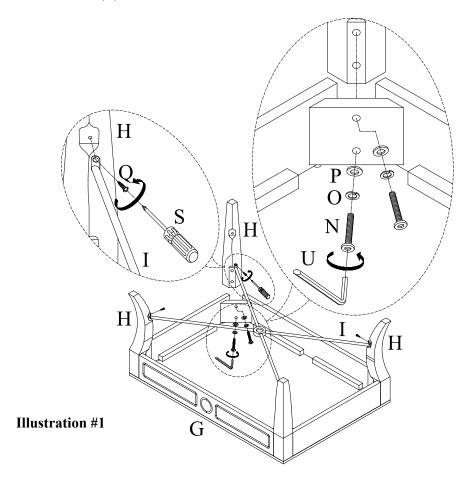

Page 3 of 6 R1-03-26-05




3300309 O-Augustine Media Cabinet

Attach Top Panel & Side Panels

Parts required

A.	Top Panel	1 pc	L.	Eccentric Cams	4 pcs
B.	Side Panels	2 pcs	M.	Plastic Covers	4 pcs
G.	Bottom Assembly	1 pc	S.	Phillips Head Screwdriver	1 pc
K.	Connecting Bolts	4 pcs	T.	Flat Head Screwdriver	1 pc

- 3. <u>Attach Connecting Bolts (K)</u> Align the exposed threads of Connecting Bolts (K) with the pre-threaded holes in the Top Panel (A) and Bottom Assembly (G). Tighten by turning in a clockwise direction. See Illustration #2.
- 4. Attach Side Panels (B) Align the Connecting Bolts (K) in Bottom Assembly (G) with the pre-drilled holes in the ends of Side Panels (B). Be sure the dowels in the ends of Side Panels (B) are aligned with the pre-drilled holes in the Bottom Assembly (G). Insert the Eccentric Cams (L) into the pre-drilled holes in the Side Panels (B). Make sure the groove in the Eccentric Cams (L) faces out and the arrow points towards the Connecting Bolts (K). Use the Flat Head Screwdriver (T) to adjust the Eccentric Cams (L) and lock the Connecting Bolts (K) in place by turning in a clockwise direction. Cover the Eccentric Cams (L) with Plastic Covers (M). See Illustration #2.
- 5. Refer to above step to attach Top Panel (A) to Side Panels (B).

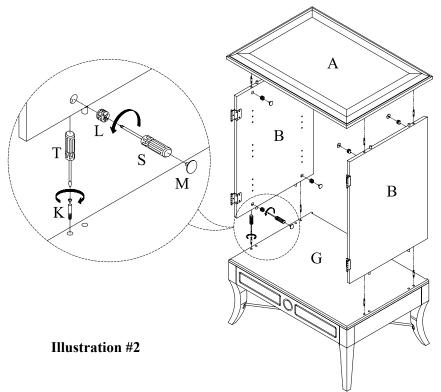

Attach Doors and Back Panel

Parts required

Page 4 of 6 R1-03-26-05




3300309

O-Augustine Media Cabinet

B.	Side Panels	2 pcs	J.	Shelf Pins	4 pcs
C.	Back Panel	1 pc	Q.	Pan Phillips Head Screws	16 pcs
D.	Left Door	1 pc	R.	Flat Phillips Head Screws	12 pcs
E.	Right Door	1 pc	S.	Phillips Head Screwdriver	1 pc
F.	Adjustable Shelf	1 pc		-	-

- 5. <u>Attach Back Panel (C)</u> Put the Back Panel (C) into the back frame formed by the Top Panel (A), Side Panels (B) and Bottom Assembly (G). Secure with Pan Phillips Head Screws (Q) using Phillips Head Screwdriver (S). Be sure the large round hole in the Back Panel (C) is a the bottom. See Illustration #3.
- 6. <u>Attach Left & Right Doors (D, E)</u> Align the pre-drilled holes in the hinges of Side Panels (B) with the pre-drilled holes in the Left & Right Doors (D, E). Secure with Flat Phillips Head Screws (R) using Phillips Head Screwdriver (S). See Illustration #3.
- 7. Attach Adjustable Shelf (F) Insert the Shelf Pins (J) into the desired pre-drilled holes in the Side Panels (B). Put the Adjustable Shelf (F) on the Shelf Pins (J). Be sure the half hole of Adjustable Shelf (F) is at the back. See Illustration #3.

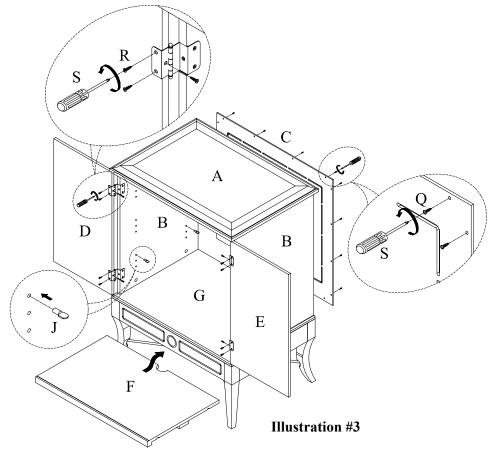

Page 5 of 6 R1-03-26-05